


Configuring the Designer's Worksheet for use with Expression 2 and Expression 3 consoles

The Kurta XGT digitizer provided by ETC for the Designer's Worksheet feature comes correctly configured for use with consoles in the Expression 2 and Expression 3 families. If you need to reconfigure it for any reason, follow these instructions.

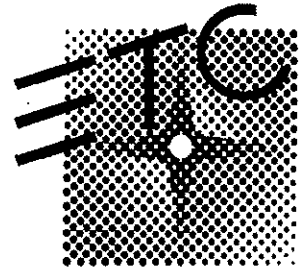


A

1. Place this page on your digitizer anywhere under the clear plastic surface protector.
2. Use the stylus to press [ALT] [F5] [F1] on the menu strip across the top of the digitizer. The digitizer beeps twice.
3. Use the stylus to press [ALT] [F4] [F5] on the menu strip. Again, the digitizer beeps twice.
4. Use the stylus to press the intersection of the crosshairs on the gray circles labeled **A**, **B** and **C** on this page.



5. Use the stylus to press these two gray rectangles. The digitizer will beep repeatedly while the stylus is near the rectangles.

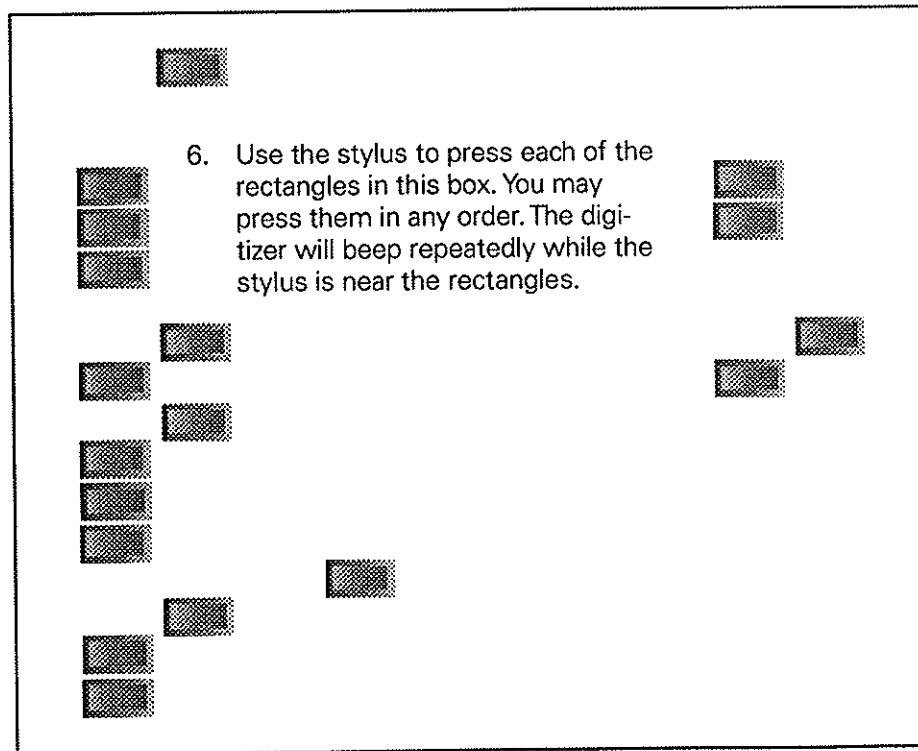

7. Use the stylus to press these two gray rectangles. Press the top one first. The digitizer beeps twice after you press each of these. Remove this page. The digitizer is reconfigured.

B

C