






LED INDICATOR GUIDE

MANAGED PRIVATE CLOUD






HARD DRIVE LEDS

LED COLOR	LED DISPLAY	DESCRIPTION
 Blue	Random blink	Normal activity
○ No light	Off	Normal Operation
 Red	Slow-blink: (1Hz on / 1Hz off)	RAID is rebuilding
 Red	Solid on	Failed drive or foreign config
 Red	Double-blink: (4Hz on / 4Hz - on / 2Hz)	Drive assigned as a hot spare
 Red	Fast-blink: (4Hz on / 4Hz off)	Slot Identify command has been issued from the command line



POWER SUPPLY LEDS

LED COLOR	DESCRIPTION
○ No light	Power supply is not functional or no power is connected
 Yellow	Power supply might not be seated correctly. Re-seat it by pulling it out and pushing it back in.
 Amber	Power supply is good. Managed appliance is powered off.
 Green	Power supply is good. Managed appliance is powered on.

This information is also available in our product documentation on the Code42 website.

<https://support.code42.com/?CID=managed-appliance-led-guide>